
BRUCIATORI

LIST OF PARTS FOR **DRAGO** BURNER

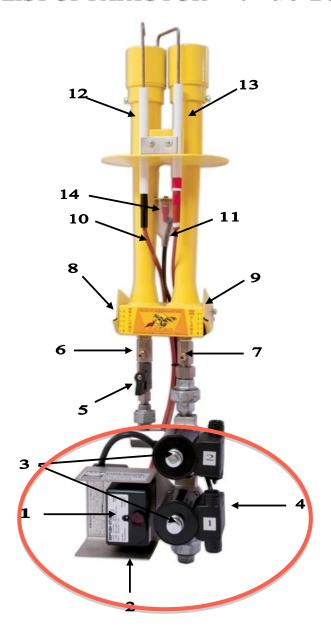

This section not included on your assembly. Refer to Burner Spare Parts list for Components.

- 1) Control equipment
- 2) Multiple plug with 7 poles.
- 3) Fuel interception electro-valve
- 4) Main pressure socket.
- 5) Regulation tap for 1st flame.
 6) Pressure intake 1st flame.
- 7) Pressure intake 2nd flame.
- 8) Primary air regulator 1st flame.
- 9) Primary air regulator 2nd flame.
 10) Flame ionization cable.
- 11) Flame ignition cable.
- 12) Flame ionization electrode.
- 13) Flame ignition electrode.
- 14) Automatic reset thermostat (110°C)